



1

Screw down the
starter trim



2

Connect your
first board



3

Screw down the
deck board



4

Connect next
board and repeat




5

Screw down final
board and mitre
edging trim

If you have any questions or
require any help during the installation
please call a member of our team on
01438 362 547
or email
info@builddeck.co.uk



The end result is a fully connected A2 Quick
Fit decking system with integrated drainage
channels

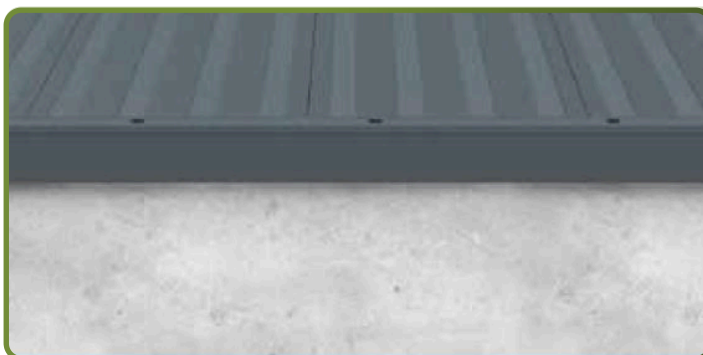

The edging trim can neatly cover the self
draining to leave the decking area with
a flush finish